


SEAT COVER INSTALLATION

MANUAL



Seat Cover Installation for Bucket Seats

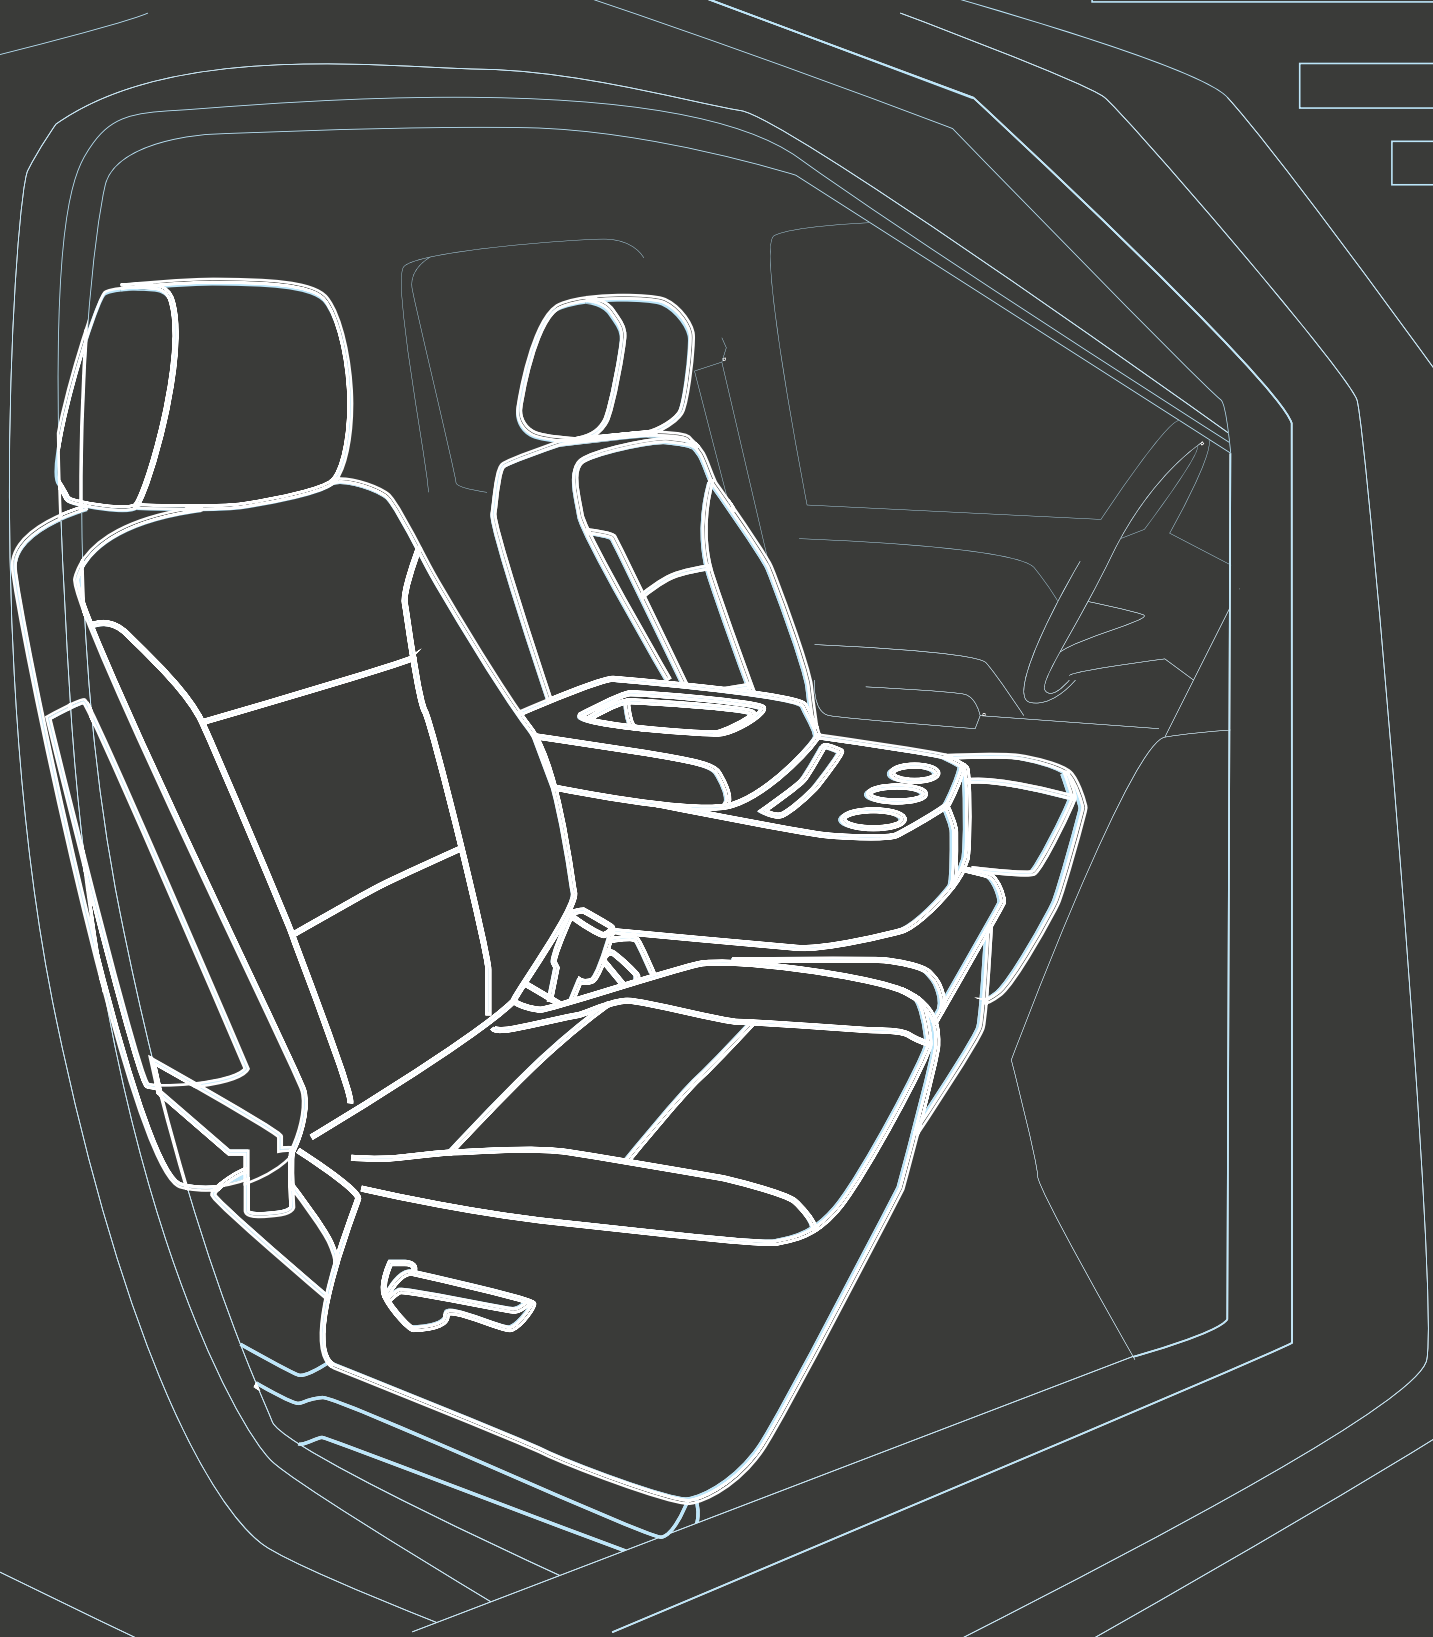

Step 1 Headrest Removal

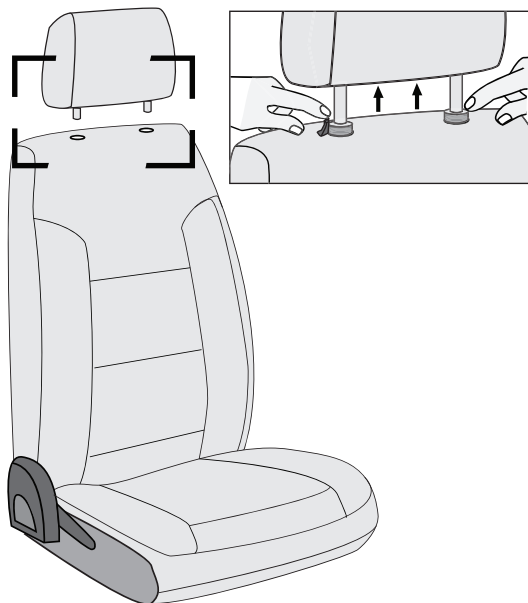


Figure 1

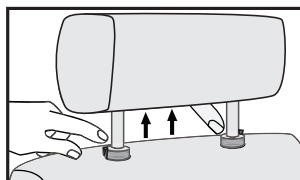


Figure 2

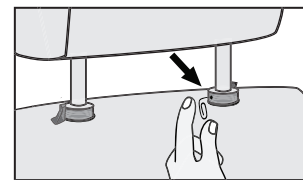


Figure 3

Headrests need to be removed prior to installation of the seat cover. Most headrests remove by pressing the adjustment button located at the base of the post (**Figure 1**) and lifting the headrest until it detaches from the seat. Some headrests have a hidden button located on the opposite side of the adjustment button (**Figure 2**) that needs to be depressed at the same time. Finally, some vehicles have a small release hole. These release holes are located at the top where the posts enter the seat (**Figure 3**). The hole can appear at the back or side of the adjustment box. The headrests need to be lifted all the way up. A small tool such as an allen wrench, molding nail, or even a paperclip can release the headrest. Insert the tool while applying vertical pressure and the headrest will come out.

Step 2

Next, slide the seat cover over the top of the seat back (**Figure 4**). Then align any headrest or control cut outs with their respective location. Locate buckles (**Figure 5**) on the inside of seat cover. Neatly slide the buckles between the seat back and seat bottom cushions. Make sure the seat cover is aligned correctly over the seat back before moving onto step 3.

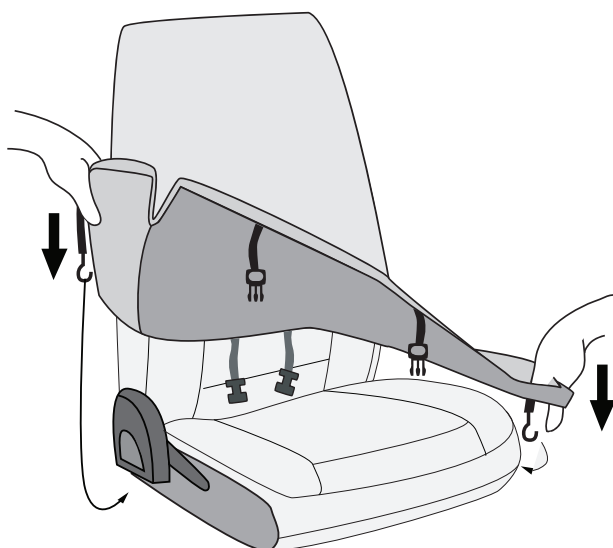


Figure 4

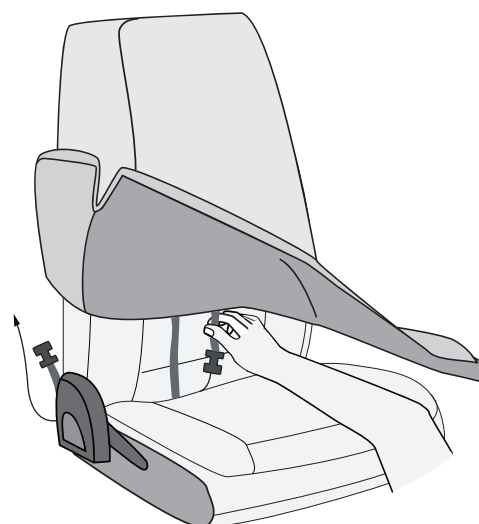



Figure 5

Seat Cover Installation for Bucket Seats cont.




Step 3

Attach front and rear buckles and pull straps until cover is tight (**Figure 6**). Locate stretch cords at the sides of the cover. Pull under seat attaching to the strap or the bottom of the seat itself (**Figure 7**). Tuck any additional material between the cushion and the plastic panel (**Figure 8**)

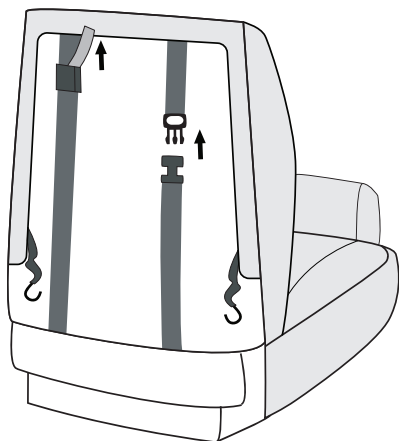

Bottom View

Figure 6

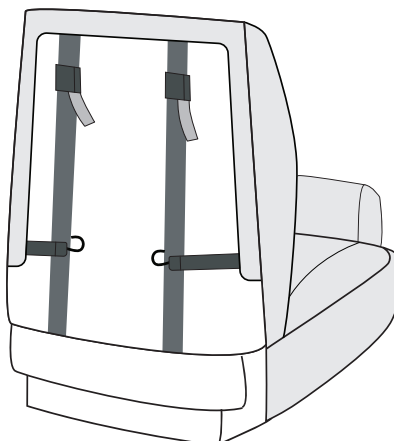

Bottom View

Figure 7

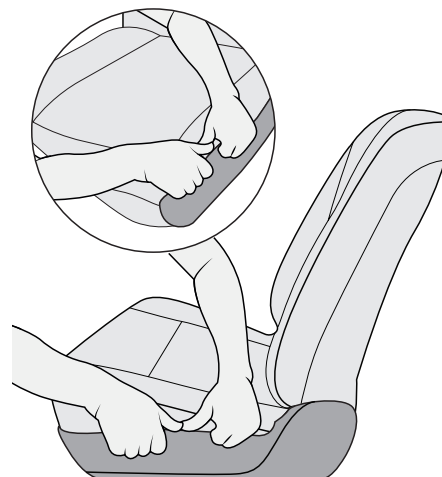


Figure 8

Step 4

Align headrest accommodation opening evenly on top of the seats back rest (**Figure 9**). Pull Velcro attachments snugly together creating an even line around headrest posts. Adjust cover for best fitment. Insert control knobs/arm rests through openings on seat cover and adjust as shown in **Figure 10**.

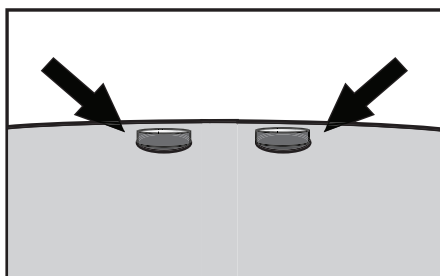


Figure 9


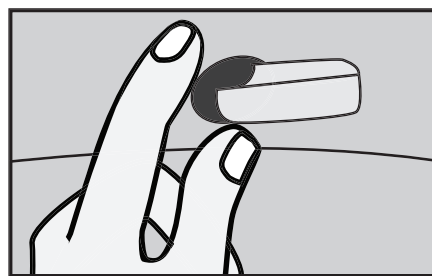


Figure 10


Note: Some Saddleblanket seat covers do not come with cut outs for headrest posts. To install insert a pencil or narrow object between weaves where posts would attach through the seat cover. Make a small circling motion to separate weave. Slide headrest posts between weave and into receptacle on top creating a seamless opening.

Seat Cover Installation for Bench Seats (A)

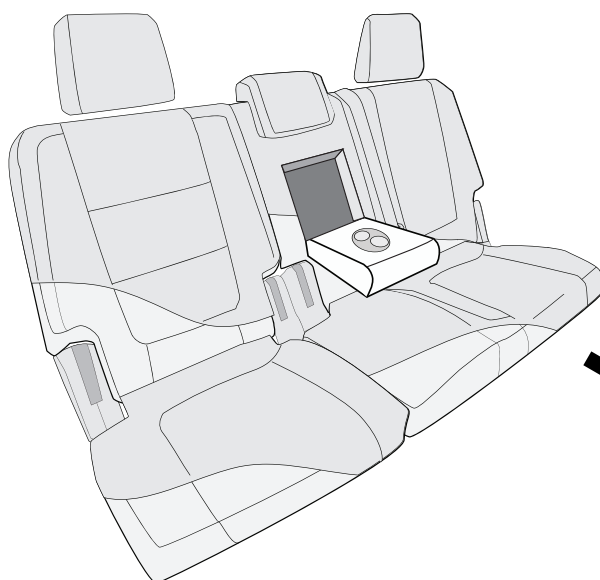


Front View

Remove headrests prior to installation of seat cover. Slide back sections of the seat cover over the seat. Loosely fit making sure any headrest or latch cut outs line up evenly. If there is an armrest make sure cut out is aligned properly.

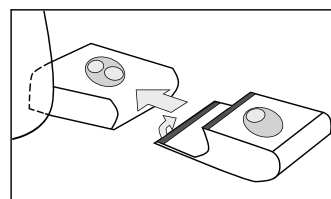


Pull armrest cover over armrest, align and secure by hooking velcros together.

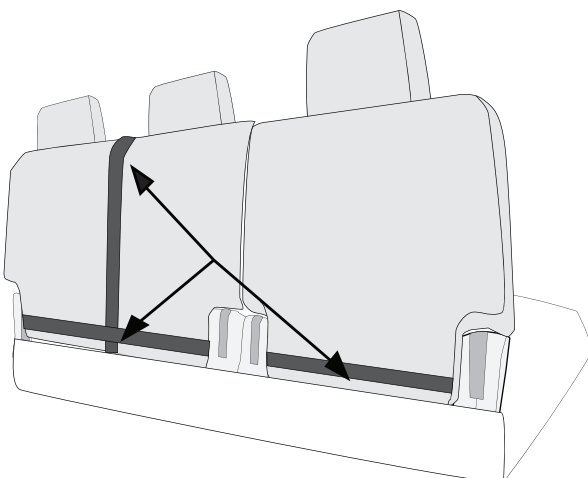

Back View


Push bottom of back rest with Velcro through seat crevice to the back of the seat. Pull top section down over the seat and align. Smooth out to desired fitment and attach Velcro sections. Repeat for opposite side.

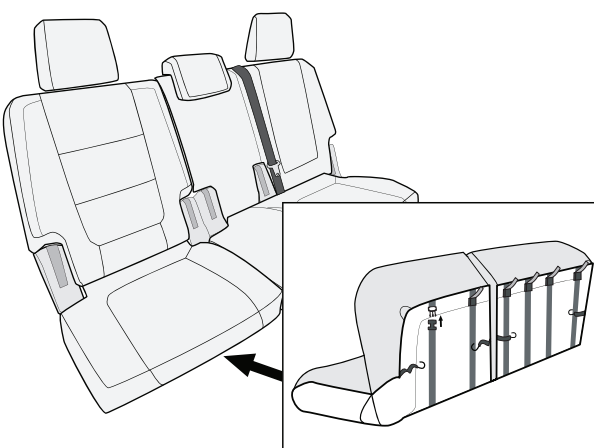

Bottom View


Push top section of cover between the seat cushions. Make sure the back straps are tucked completely through seats. Smooth out cover to desired fitment. To secure cover pull the back buckles towards the front receptacles. Loosely clip buckles together. Once seat cover is aligned pull straps taught. The side elastic loops can then be hooked to the back straps. Many seat bottoms fold up which will help with the installation.

Seat Cover Installation for Bench Seats (B)

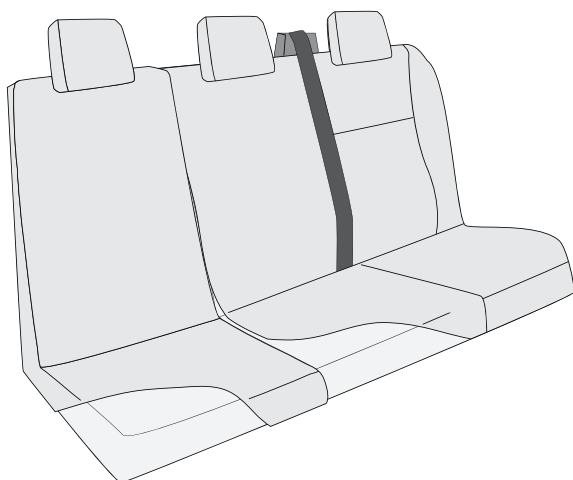


Front View

Remove headrests prior to installation of seat cover. Slide back sections of the seat cover over the seat. Loosely fit making sure any headrest or latch cut outs line up evenly. If there is an armrest make sure cut out is aligned properly.

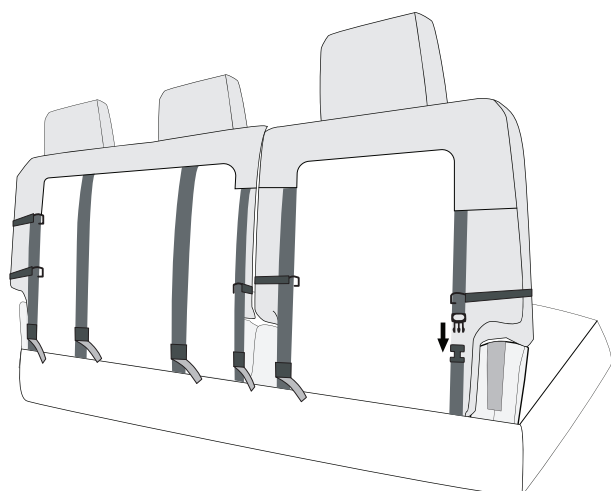

Back View

Fold up bottom seats(if applicable). Locate top and bottom buckles. Loosely attach receptacles. Make sure seat cover is in desired location and tighten straps. Once the straps are tight the side elastic can be pulled around and hooked to the straps. Repeat procedure for opposite side.

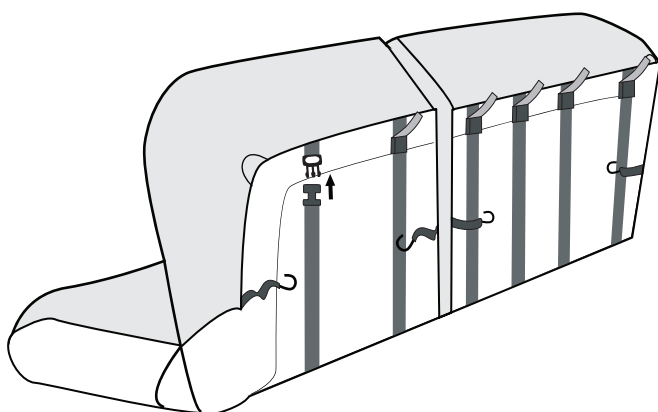

Bottom View

Push top section of cover between the seat cushions. Make sure the back straps are tucked completely through seats. Smooth out cover to desired fitment. To secure cover pull the back buckles towards the front receptacles. Loosely clip buckles together. Once seat cover is aligned pull straps taught. The side elastic loops can then be hooked to the back straps. Many seat bottoms fold up which will help with the installation.

Seat Cover Installation for Bench Seats (C)

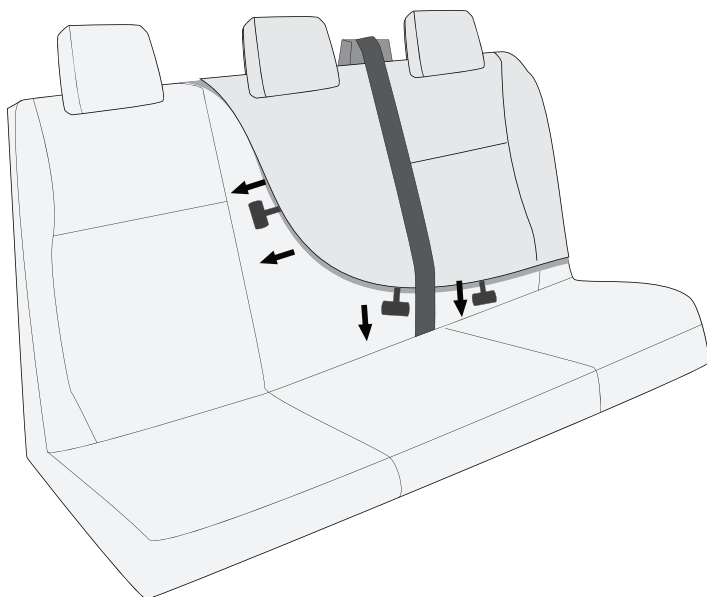


Figure 1

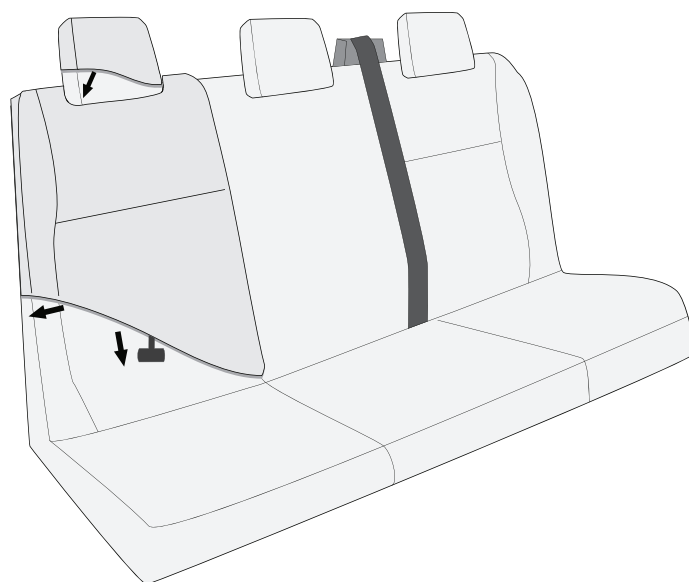


Figure 2

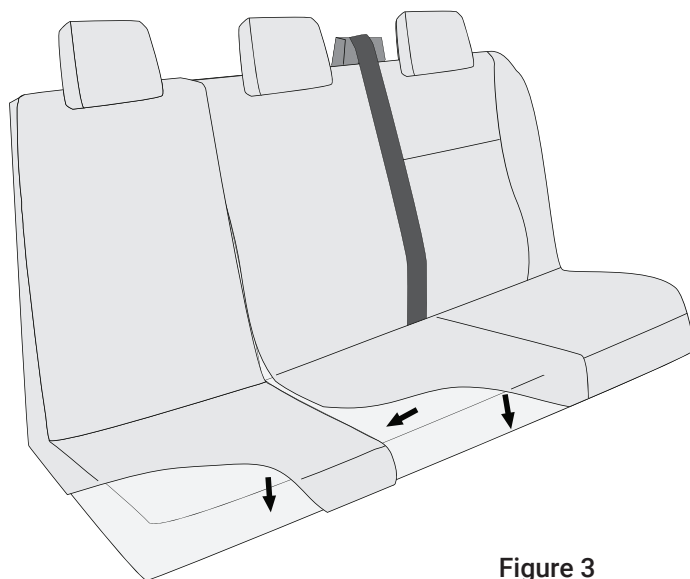


Figure 3

Slide bottom covers over the bench sections of the seat. Most rear seats flip up which will help with the installation. Fit covers on seat to liking and then flip up bottom sections and attach front and rear straps and buckles. Some sections will also attach to the seat with Velcro. The side elastic attach to the straps once they are pulled tight. Make sure to fully adjust cover before attaching Velcro.

Seat Cover Installation for Center Consoles

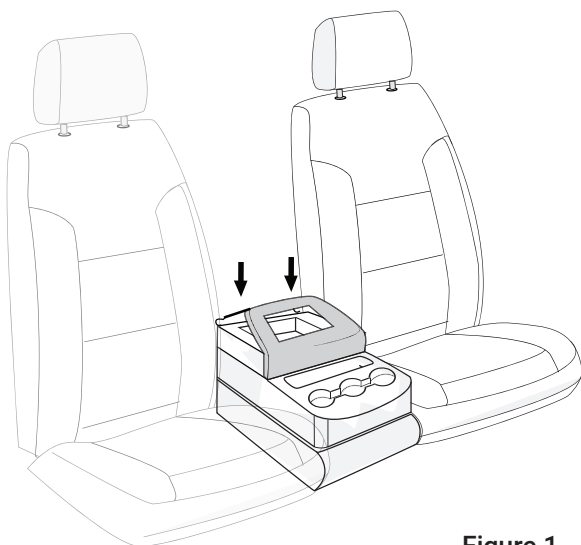


Figure 1



Figure 2

Installing the center section. Lid covers (**Figure 1**) attach similar to a shower cap. Some lid covers come with elastic straps that slide under the lid. The upper console installs beneath the lid (**Figure 2**) with the open side facing up. Slide elastic straps under the open lid (some straps need to be tied) making sure all latch cut outs are positioned properly as some need to be attached with Velcro. The back of the console will attach with Velcro or elastic as well.

One-piece console covers (**Figure 3**) install with a Velcro flap that tucks between the top and bottom pieces. The upper section has elastic that slides beneath the console lid and can be tied or attached together with included hooks. Opening bottom consoles (**Figure 4**) have a lid cover that attaches with Velcro to the underside of the lid or on the back section. Non opening bottom pieces attach with elastic straps and hooks.

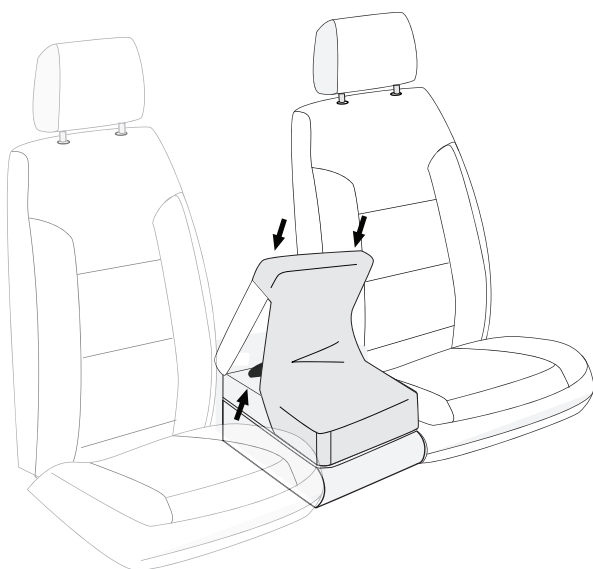


Figure 3

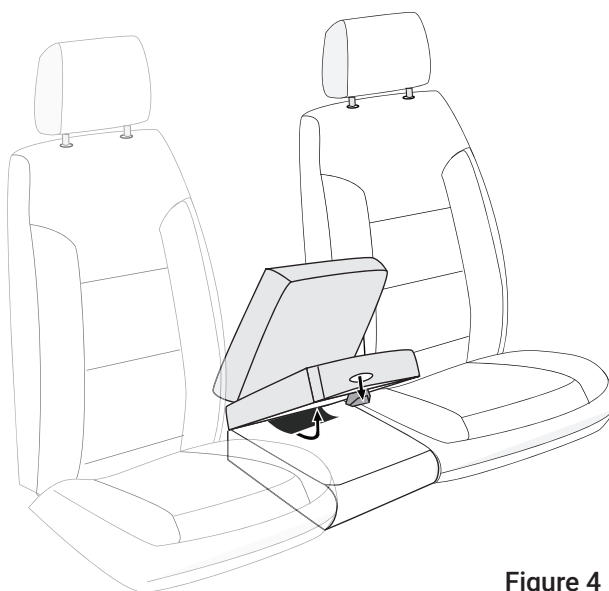


Figure 4

*For installation assistance or product questions
please call us at 800-883-9919
or email us at customerservice@aii-usa.com*

*Installation video are available on our website
www.saddleman.com*

